


# EPOS

IMPACT D 10 HS | IMPACT D 10 HS II

## Battery Removal Guide

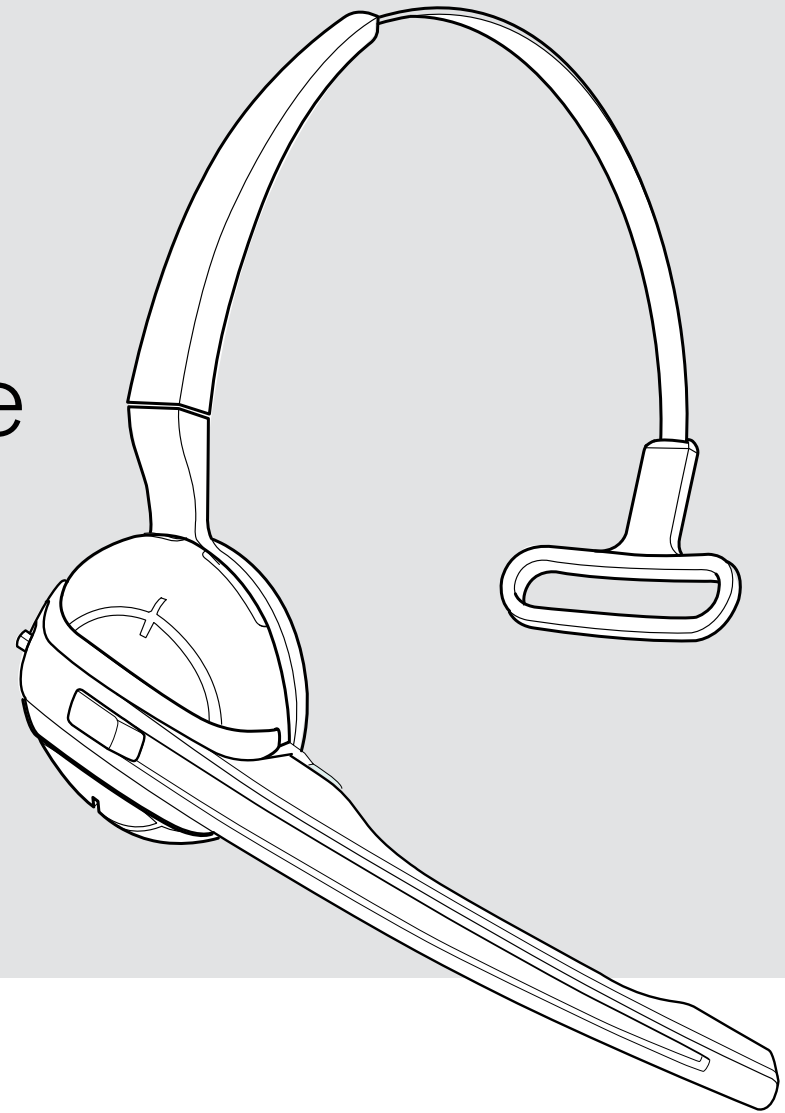



DSEA A/S

Kongebakken 9, DK-2765 Smørum, Denmark  
[www.eposaudio.com](http://www.eposaudio.com)

Publ. 12/21, A01




THE POWER OF AUDIO

# Battery Removal Guide

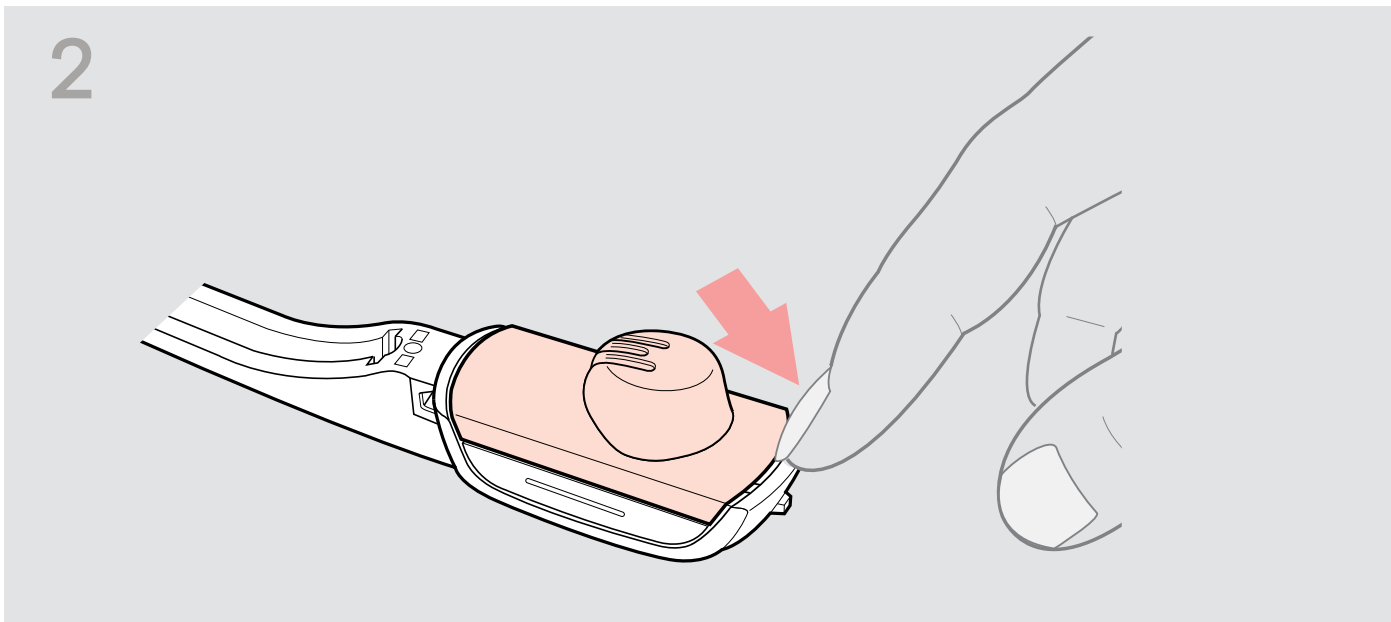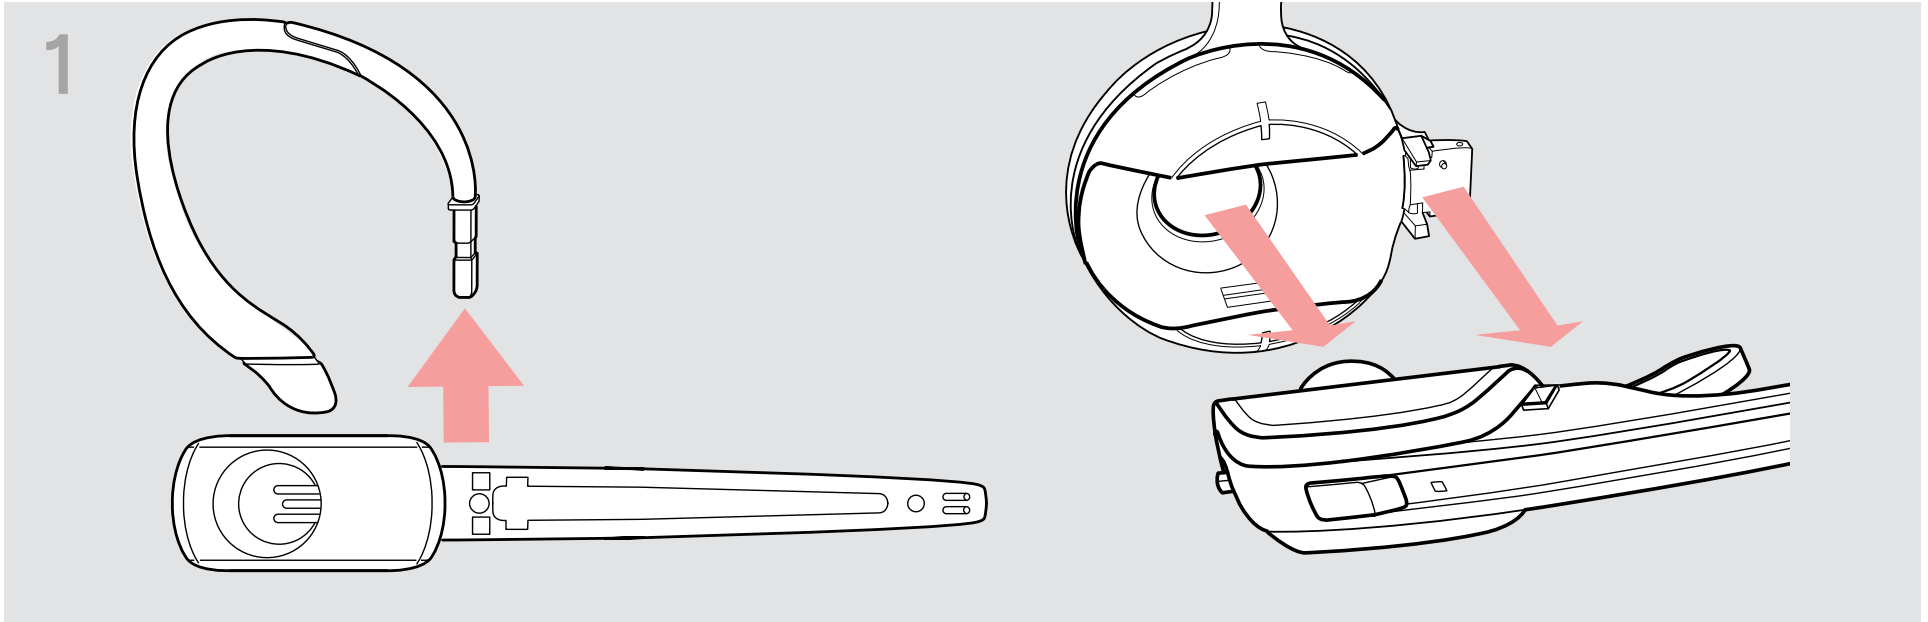

1. Remove the ear hook or the headband.
2. Open the battery compartment.

# Battery Removal Guide

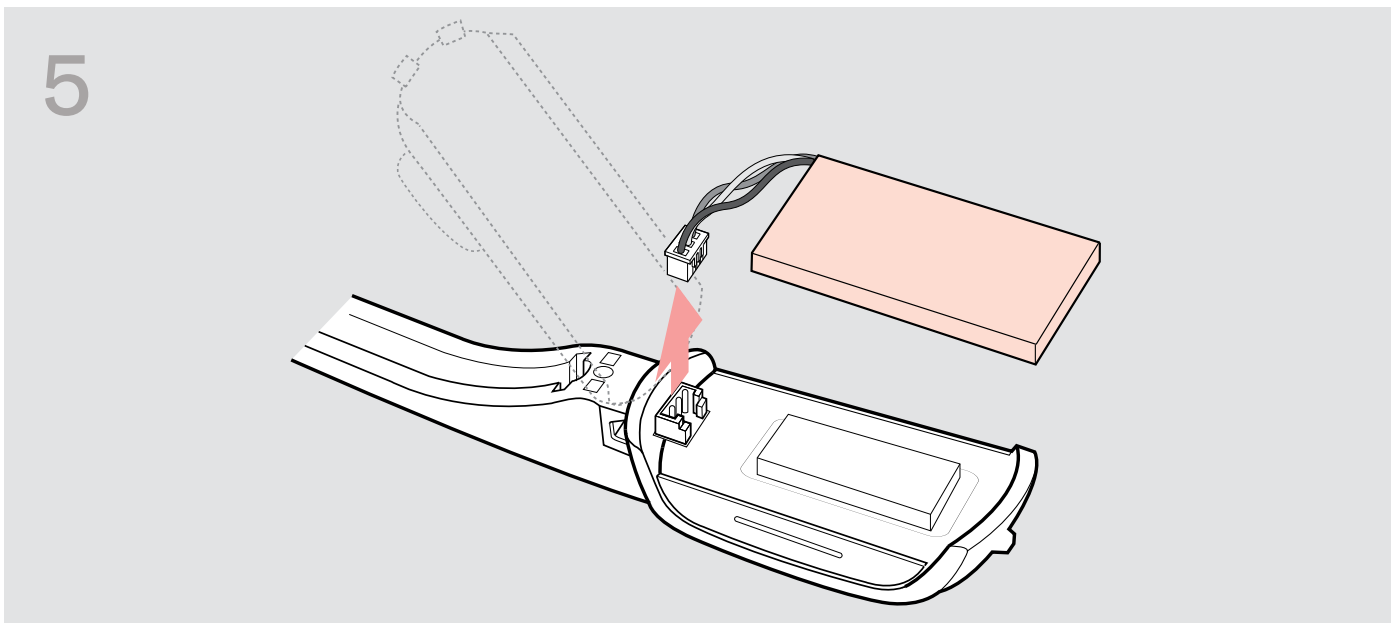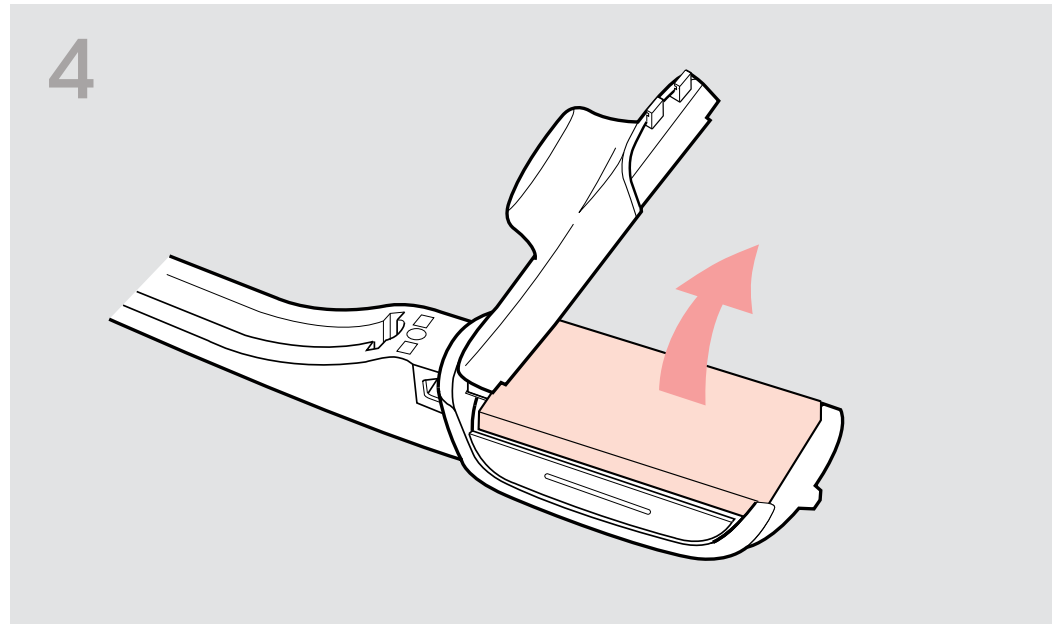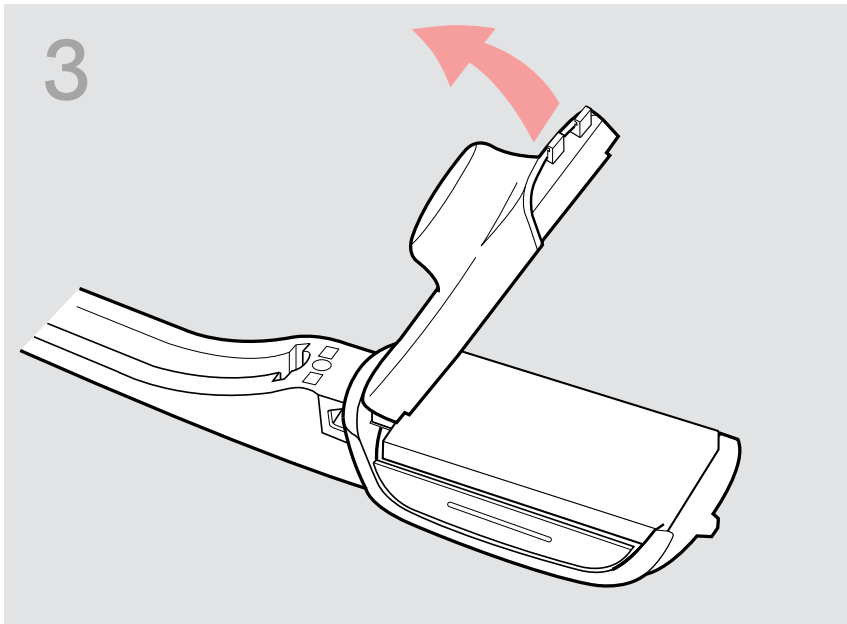

3. Move the battery compartment cover in the direction of the arrow until you overcome a slight resistance.
4. Lift the rechargeable battery.
5. Unplug the connector and remove the rechargeable battery.